Symbol	Meaning	How to Turn it Off
©	Lights are parked (set at a specific level)	Channel Numbers, Shift+M8, then enter
	Grandmaster is down	Bring far right faders (master A and B) up to full
	You have changed the levels	
	Some channels will come in or out at a different time than the cue time	Press Lvl Time, select the channels that have bright white times, press @ then Enter and update the cue
	The cue has an effect	Delete cue and start over
	The cue auto-follows into the next	Cue, then number of the cue, Follow, then enter
69	The level of the lights went down from the previous cue	
69	Level is unsaved	
69	Level stays the same from previous cue	
69	Level of light went up	
	Lights are parked at a level	i don't think this is a thing?
69	Level is up from fader	
6969	you have broken the board	get a new board (also a solution for any of the above problems)